

# eMT3000 series



eMT-3150A

## Installation Instruction

## 1.0 Installation and Startup Guide

### Install Environment

#### Where Used

The eMT-3000 Series is designed for industrial. The temperature range of operating is from 32 to 122 °F (0 to 50 °C) , as majority of industrial environments. It may not be suitable for using in certain outdoor applications. Please consult the factory for advised usage in outdoor applications.

#### NEMA Rating

The eMT-3000 Series front bezel is NEMA 4 rated. When installed properly in a NEMA 4 panel, the NEMA 4 rating of the panel will not be compromised. This means that fluids will not enter the panel during wash downs.

#### Electrical Environment

The eMT-3000 Series has been tested to conform to European CE requirements. This means that the circuitry is designed to resist the effects of electrical noise. This does not guarantee noise immunity in severe cases. Proper wire routing and grounding will insure proper operation.

#### Mechanical Environment

Avoid installing units in environments where severe mechanical vibration or shocks are present.



## 2.0 Installation Instructions

### 2.1 Mounting Instructions

#### 2.1.1 Location Considerations

Care should be taken when locating equipment behind the unit to ensure that AC power wiring, PLC output modules, contactors, starters and relays, and any other source of electrical interference are located away from the back of the unit.

Particular note should be taken to the position of variable speed drives and switching power supplies. Their input and load cables should be screened to a central star earth point.

## 2.1.2 Making a NEMA-4 Mounting

### Panel Details

The unit can be mounted into panels with a depth of 4”(105mm). It is recommended that the unit be mounted on the front panel of a steel enclosure, through an appropriate opening\*. Allow a clearance of 1”(25mm) around the sides of the unit for mounting hardware. Allow clearance for cable connections to the back of the unit. Unit depth may vary according to cable type used. Typically, plan a depth to accommodate at least 4”(105mm) behind the panel.

### NEMA-4 Mounting

Put the unit through the panel cut out. Slide the clamps (packed with product) into every hole provided around the case. Tighten the clamping screws in an even pattern until the unit is secured in the panel. Screw Torque: 2.6~3.5 lbf.in. (For reaching waterproof effect and to prevent the panel from being deformed.)

### VESA Mounting

There are 4 holes on back panel for locking VESA, The screw: M4 P0.7mm, length: shorter than 8.0mm, and screw torque: 2.6 lbf.in.

### Caution!

Do not over tighten mounting clamps!

### Note: Specifications

Note: To seal to NEMA-4 specifications, all supplied mounting clamps must be used and panel cannot flex more than 0.010”.

## 2.1.3 Environmental Considerations



- The eMT-3000 is to be used indoors as built in displays. Make sure that the displays are installed correctly and that the operating limits are followed (See Specifications).
- Do not operate the unit in areas subject to explosion hazards due to flammable gases, vapors or dusts.
- The unit should not be installed where fast temperature variations and/or high humidity are present. This will cause condensation of water in the device.
- Do not install these terminals in environments where have inflammable gases.

## 2.2 Power Connections

Make sure that all local and national electrical standards are met when installing the unit. Contact your local authorities to determine which codes apply.

### 2.2.1 Power Requirements



#### Power

The eMT-3000 can be powered by DC power only. The specified voltage range is  $24 \pm 20\%$  Volts DC. This insures compatibility with most controller DC systems.

The power conditioning circuitry inside the unit is accomplished by a switching power supply. The peak starting current can be as high as 2A.



#### Fusing Requirements

If the display does not come on within 5 seconds of power up, remove power. An internal fuse will prevent damage if the polarity of the DC power is incorrect. Check wiring to insure proper connections and try to power up again.



#### Caution High Voltage

An Internal fuse will prevent damage for over voltage condition however it isn't guaranteed.

DC voltage sources should provide proper isolation from main AC power and similar hazards.



#### Caution Emergency Stop

A Hard-wired EMERGENCY STOP should be fitted in any system using an eMT-3000 to comply with ICS Safety Recommendations.



### Caution Supply Voltage Condition

Do not power the eMT-3000 and inductive DC loads, or input circuitry to the controller, with the same power supply. Note: The 24 VDC output from some controllers may not have enough current to power the eMT-3000.



### Caution Wire Routing


Wire lengths should be minimized (Maximum 1600' (500 m) shielded, 1000' (300 m) unshielded). Wires should be run in pairs with a neutral or common paired with a hot or signal line. If wiring is to be exposed to lightning or surges, use appropriate surge suppression devices. Keep AC, high energy, and rapidly switching DC wiring separate from signal wires.

Equip ungrounded DC supplies with a resistor and capacitor in parallel to earth ground. This provides a path for static and high frequency dissipation. Typical values to use are 1M $\Omega$  and 4700pF.

To make a connection, strip about 3/8" of insulation off the end of the wire, turn the connector screw counterclockwise until the gap is wide open, insert the wire all the way in, and turn the screw clockwise until it's tight.

Connect positive DC line to the '+24V' terminal and the DC ground to the '0V' terminal.

### Connection

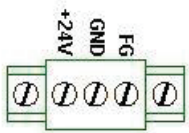

+24V +24 VDC Power

GND Power Ground

FG Earth Ground

## 2.2.2 Grounding Requirements



Chassis ground must be used. DC ground is not directly coupled to Earth ground internally. It is preferable not to ground DC negative return to chassis ground as poor site earths can introduce noise into a system, but if necessary an earth connection should be made, from the power supply return point to the central star earth point. Ground conductors should be as short and as large in size as possible. The conductors must always be large enough to carry the maximum short circuit current of the path being considered. Ground conductors should be connected to a tree from a central star earth ground point. This ensures that no ground conductor carries current from any other branch.

## 2.2.3 CE Requirements

To make an eMT-3000 comply with EMC directives, and to reduce susceptibility to electrical interference, a separate #14 AWG ground wire should be taken to the chassis ground terminal of the power connector. This ground connection should be run directly to the central star earth connection point (as recommended in most Installation Instructions).

## 2.2.4 Safety Guidelines

This section presents recommended installation practices, and procedures. Since no two applications are identical, these recommendations should be considered as guidelines.

### Hardware Considerations

#### WARNING!



The system designer should be aware that devices in Controller systems could fail and thereby create an unsafe condition. Furthermore, electrical interference in an operator interface, such as an eMT-3000, can lead to equipment start-up, which could result in property damage and/or physical injury to the equipment operator.

If you, or your company, use any programmable control systems that require an operator or attendant, you should be aware that this potential safety hazard exists and take appropriate precautions. Although the specific design steps depend on your particular application, the following precautions generally apply to installation of solid-state programmable control devices. In addition, these precautions conform to the guidelines for installation of Controllers as recommended in the NEMA ICS 3-304 Control Standards.

### Programming Considerations

To conform with ICS Safety Recommendations, checks should be placed in the controller to ensure that all writable registers that control critical parts of plant or machinery have limit checks built into the program, with an out-of-limit safe shut down procedure to ensure safety of personnel.

### ICS 3-304.81 Safety Recommendations:

Consideration should be given to the use of an emergency stop function, which is independent of the programmable controller.

Where the operator is exposed to the machinery, such as in loading or unloading a machine tool, or where the machine cycles automatically, consideration should be given to the use of an electromechanical override or other redundant means, independent of the programmable controller, for starting and interrupting the cycle.

If provision is required for changing programs while the equipment is in operation, consideration should be given to the use of locks or other means of assuring that only authorized personnel can make such changes.

These recommendations are intended as safeguards against the failure of critical components and the effects of such failures or the inadvertent errors that might be introduced if programs are changed while the equipment is in operation. \*

- The ICS 3-304.81 Safety Recommendations are reproduced by permission of the National Electrical Manufacturers Association from NEMA ICS 3-304

## 2.3 Communications Connections

The ports as you look at the back of the case, are the ports for connecting to a PLC or some external device (Controller Connectors).

### 2.3.1 Connector COM1 [RS232], COM3 [RS232]

#### Cable Requirements Caution


Different cables are required for various devices. Restrict cable length to less than 500' (150m) for RS485/422 devices and 50' (15m) for RS232 devices to avoid communications problems.

The COM light on the front of the eMT-3000 will turn on with each Ethernet communication. Shielded cable must be used for long lengths or cables run in an electrically noisy environment.

Do not run cables next to AC power lines or near sources of electrical noise. Be sure that the cable ends have been inserted all of the way into mating connectors and are secure.

Pin assignment of the 9 Pin, Male, SUB-D, COM1 [RS-232], and COM3 [RS-232] Port.

#### Pin Designations



COM1 [RS-232]

COM3 [RS-232]

Pin#	Symbol	COM1 [RS232]	COM3 [RS232]
1	Not used		
2	RxD	Received Data	
3	TxD	Transmitted Data	
4	Not used		
5	GND	Signal Ground	
6	Not used		
7	RTS	Ready to send output	Transmitted Data
8	CTS	Clear to send input	Received Data
9	Not used		


**Note: When using COM1[RS232] RTS/CTS, COM3[RS232] can not be used simultaneously.**

### 2.3.2 Connector COM1[RS485] , COM3[RS485] and CAN Bus

The 9 Pin, Female, SUB-D, COM1 [RS-485], COM3 [RS-485] and CAN Bus Port with isolation protection.

COM1 [RS485]2w and COM3 [RS485]2w support MPI 187.5K, please select one to use at one time.

**Connection  
Pin Designations**



COM1 [RS-485]  
COM3 [RS-485]  
CAN Bus

Pin assignment of the 9 Pin, Female, SUB-D COM1 [RS-485], COM3 [RS-485] and CAN Bus Port

Pin#	Symbol	Com1 [RS485]2w	Com1 [RS485]4w	Com3 [RS485]	CAN Bus
1	Rx-	Data-	Rx-		
2	Rx+	Data+	Rx+		
3	Tx-		Tx-		
4	Tx+		Tx+		
5	GND	Signal Ground			
6	Data-			Data-	
7	CAN_L				CAN_L
8	CAN_H				CAN_H
9	Data+			Data+	

**2.3.3 USB Host Port**

USB 2.0 Host interface supports USB mouse, keyboard, USB Flash Drive and printer.

While using external hard drive, please use external power supply. Do not use USB port to charge external device.

**2.3.4 USB Client Port**



Mini USB cable (RZCMT6100) is used to download projects from PC by the USB 2.0 client port. Support USB 2.0 client interface. The cable regulation must accord with HI-SPEED USB Revision 2.0 SHIELDED.

Note: Please do not connect HMI with PLC and PC simultaneously to prevent potential difference from destroying USB ports of HMI and PC.

**How to install USB driver of HMI eMT series**

It is necessary to install USB driver of HMI on PC at the first time enjoying this function.


1. Using USB cable mini side plug to HMI and another side plug into PC. The PC will display “Found New Hardware Wizard” dialog. Select “Install from a list or specific location (Advanced)”.
2. Check “Include this location in the search”, and assign the path to install Weintek HMI eMT Series driver from C:\EasyBuilder Pro\usbdriver.
3. If the USB driver successfully be installed, user can check it at Computer Management / Device Manager. Then user can download project to HMI eMT series through USB cable.

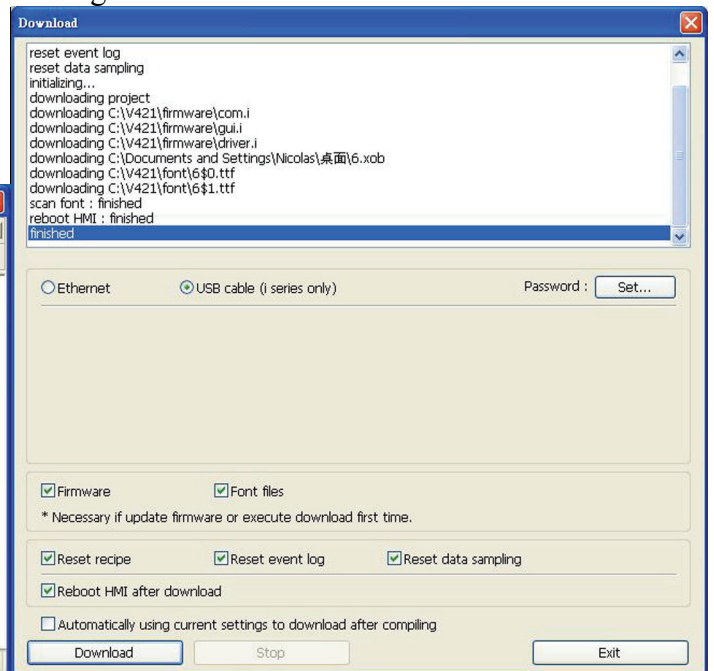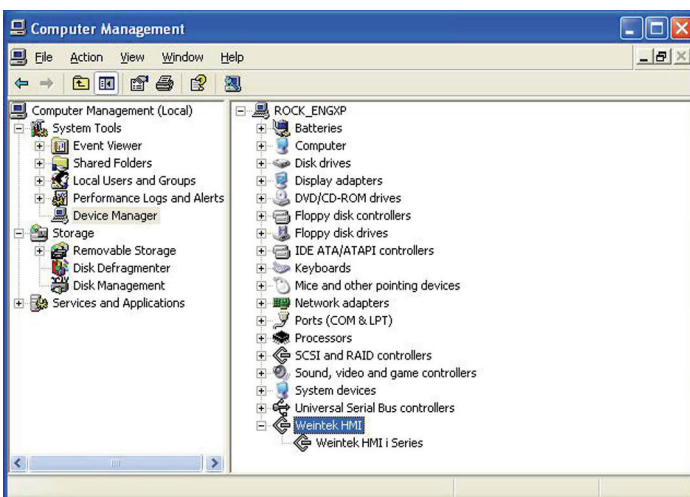


### 2.3.5 Connector Wire

MT8-Ethernet/RZK080000: Direct connect (Ethernet crossover cable)

MT8000 Ethernet RJ45	Wire color	PC or Notebook RJ45
1 TX+	White/Orange	3 RX+
2 TX-	Orange	6 RX-
3 RX+	White/Green	1 TX+
6 RX-	Green	2 TX-

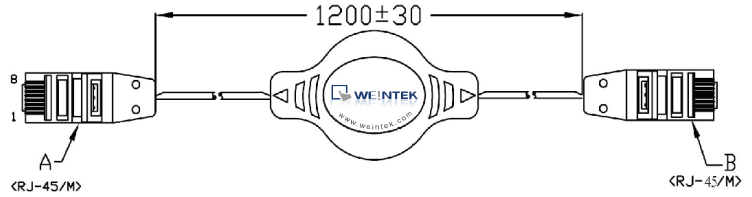

### 2.3.6 Dip Switch

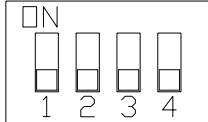

SW1	SW2	SW3	SW4	Mode
ON	OFF	OFF	OFF	Touch Screen Calibrate Mode
OFF	ON	OFF	OFF	Hide HMI System Setting Bar
OFF	OFF	ON	OFF	Boot Loader Mode
OFF	OFF	OFF	ON	Reserved
OFF	OFF	OFF	OFF	Normal

## 2.4 Limited Liability Warranty

Weintek products include the isolated power supply are covered by a limited liability warranty from defects in material and workmanship. This warranty does not apply :

- if, in the judgment of Weintek, the product fails due to damage from shipment, handling, storage, accident (natural and man-made) ;
- if the product fails due to misuse, including but not limit to incorrect set-up and wiring, current leakage from machine platform and incorrect input power ;
- if the product has been maintained in a manner not conforming to product's instructions or has been modified in any way ;
- if the serial number has been defaced or removed.

## 2.5 Requirements

**EU directives that apply to the eMT-3000 Series:**

- EMC Directive (2004/108/EC) electromagnetic emissions and immunity.
- UL508 ( ISBN 0-7629-0404-6 ) machine safety for use in Pollution Degree 2 Environment.
- eMT-3000 products will be CE-marked to indicate compliance with the EMC Directive.

The eMT-3000 Series has been designed to operate satisfactorily in electromagnetic noise (immunity) and without emitting high levels of electrical noise into the environment (emission). The units are designed to meet European Community standards when installed per the wiring instructions in this manual.

### Compatibility Standards


The eMT-3000 has been designed to meet electromagnetic compatibility for industrial environments. The CE Requirements:

- EN 55022: 2006 + A1: 2007, Class A
- EN 61000-3-2: 2006
- EN 61000-3-3: 2008
- EN 55024: 1998 + A1: 2001 + A2: 2003

# 3.0 Specifications

<b>eMT3150A</b>	
<b>Hardware Specification</b>	
Display	15" TFT
Brightness	350 cd/m <sup>2</sup>
Color	16.2M
Contrast Ratio	700:1
Resolution (WxH dots)	1024 x 768
Back light	LED
CCFL life time	50,000 hr. Min.
Touch panel	4 wires resistive type
Touch Accuracy	Active Area Length(X)±2%, Width(Y)±2%
Ethernet port	1 RJ45 port (10/100 Base-T)
I/O port	COM1 (RS-232/RS-485 2W/4W), COM3(RS-232/RS-485 2W),CAN Bus
USB Host/Client	1 USB 2.0 Full Speed Host Port /1USB 2.0 Full Speed Client Port
Audio	Audio Line Out x 1
Video Input Port	NTSC/PAL RCA x 2
Processor	32bit RISC CPU 800 MHz processor
Storage	256MB flash memory
DRAM	256MB DDR2 RAM on board
SD card slot	Support SD/SDHC
RTC	Built-in (CR2032 3V lithium battery.)
<b>General Specification</b>	
Input Power	24±20% VDC (19.2~28.8VDC)
Power Consumption	900 m A@24VDC
Isolated Power Supply	Built-in
CE/FCC	Complies with EN 55022: 2006+A1: 2007, Class A EN61000-3-2:2006 EN61000-3-3:2008 EN 55024: 1998+A1: 2001+A2: 2003
Voltage resistance	500VAC (1 min.)
Isolation resistance	Exceed 50MΩ at 500VDC
Vibration endurance	10 to 25 Hz (X,Y,Z direction 2G 30minutes)
Protection structure	IP65 front panel (O ring seal)
Storage Temperature	-20~70°C (-4° ~ 158°F)
Operating Temperature	0~50°C (32° ~ 122°F)
Operation humidity	10-90% RH (non –condensing)
Enclosure	Aluminum
Dimensions WxHxD	366 x 293 x 57mm
Panel cutout dimension	352 x 279 mm
Weight	Approx. 2.75 kg
<b>Software Specification</b>	
Software	EasyBuilder Pro

# 4.0 Dimensions of eMT-3150A

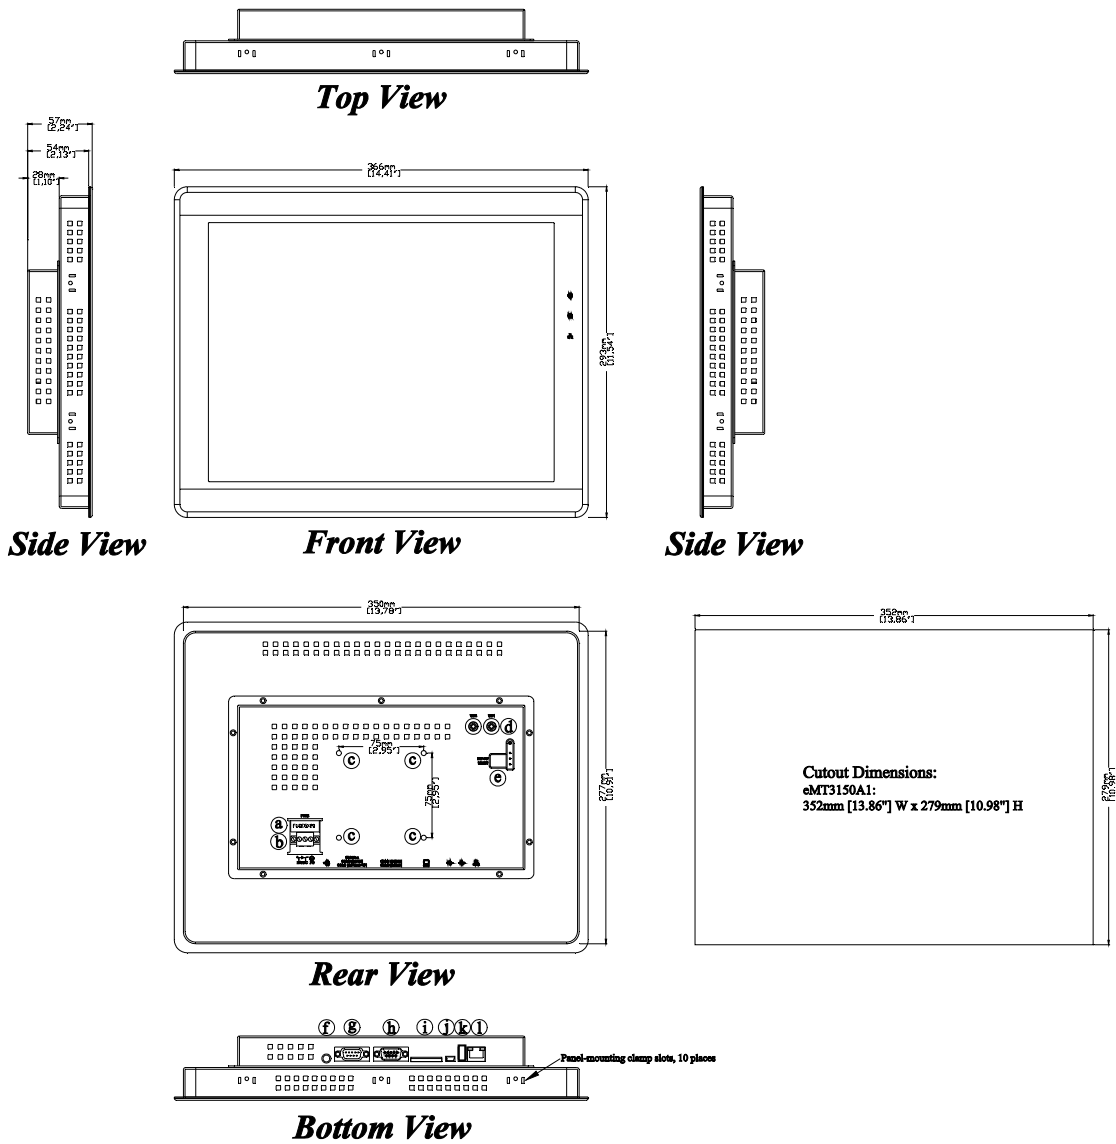

a	Fuse	g	Com1 RS485, Com3 RS485, CAN Bus
b	Power Connector	h	Com1 RS232, Com3 RS232
c	VESA 75mm Screw Holes	i	SD CARD SLOT
d	Video Input Port x 2	j	USB Client port
e	DIP SW & Reset Button	k	USB Host port
f	Line Out	l	Ethernet Port

GME3150A0\_eMT3150A1\_Installation\_120208